



AllPondSolutions®

POND WATER SURFACE SKIMMER POND SKIM-1



REMOVES FLOATING DEBRIS,
LEAVES AND DUST FROM POND
SURFACE

SUITABLE FOR PONDS UP TO 40M2

REMOVABLE FILTER BASKET FOR
EASY MAINTENANCE

TELESCOPIC RISER ENABLES EASY
HEIGHT ADJUSTMENT

DIRECTIONAL TILT FEATURE
ALLOWS SKIMMER TO REMAIN
FLUSH WITH WATER SURFACE




Thank you for purchasing your All Pond Solutions Pond Surface Skimmer. Before installing your unit, please ensure that you have read the below instructions and taken note of all safety advice. If you have any further questions or concerns, please contact the retailer before installing your POND SKIM-1 surface skimmer.

SAFETY

CAUTION: Always turn off the water supply before carrying out any maintenance. Do not attempt to modify this unit in any way and only use the recommended parts for replacement.

- Always disconnect all pond appliances from the mains supply before putting your hands into the water
- Do not cover this unit
- To protect the unit during the winter months, disconnect from your water and electricity supplies and store indoors during adverse weather conditions. The skimmer can be damaged if frozen in the water, and the warranty does not cover ice damage.
- Young children should always be supervised near water

PARTS DIAGRAM


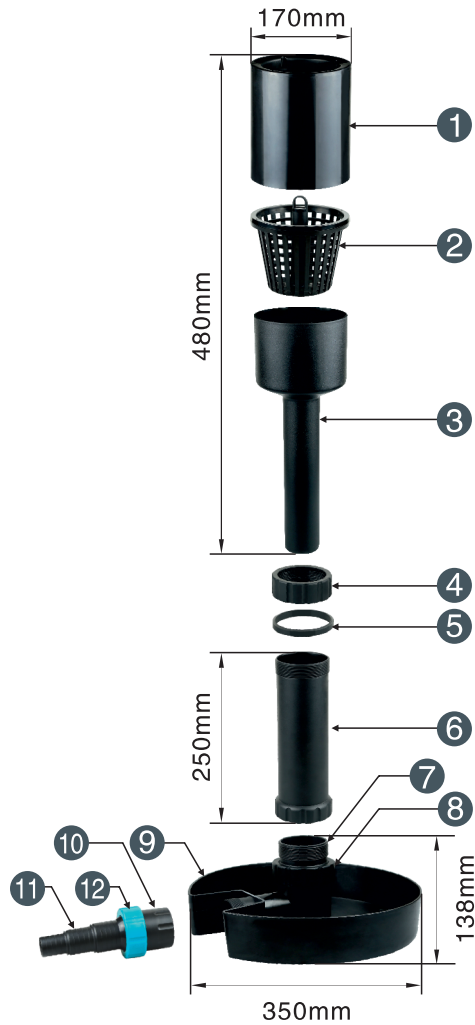


1	FLOAT	7	UNIVERSAL JOINT
2	FILTER BASKET	8	BASE NUT
3	FILTER CARTRIDGE	9	SKIMMER BASE
4	COUPLING NUT	10	OUTLET RIM
5	O-RING	11	HOSETAIL
6	EXPANSION PIPE	12	OUTLET NUT


OPERATION GUIDE

- Before assembling your pond skimmer, you will need to determine the desired height of your skimmer. The water level should be 2 to 3 inches below the top rim of the float. Use the chart below:

- A** with filter cartridge + expansion pipe extended
- B** with filter cartridge + expansion pipe minimised
- C** Cut filter cartridge to desired length

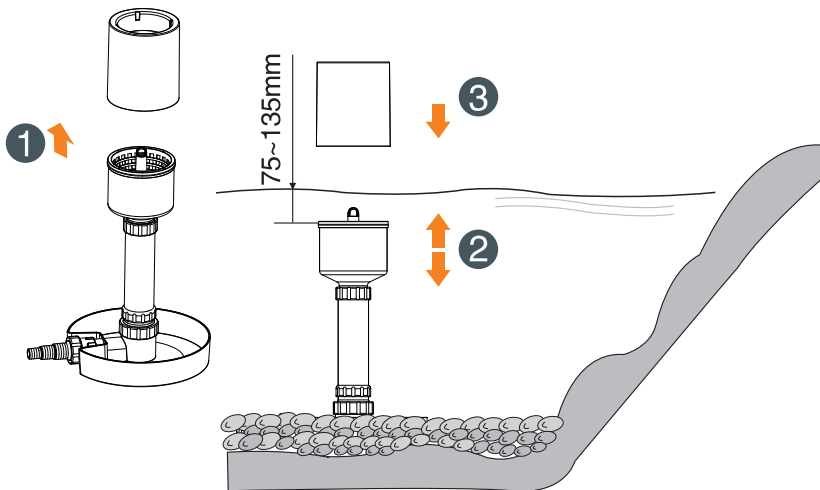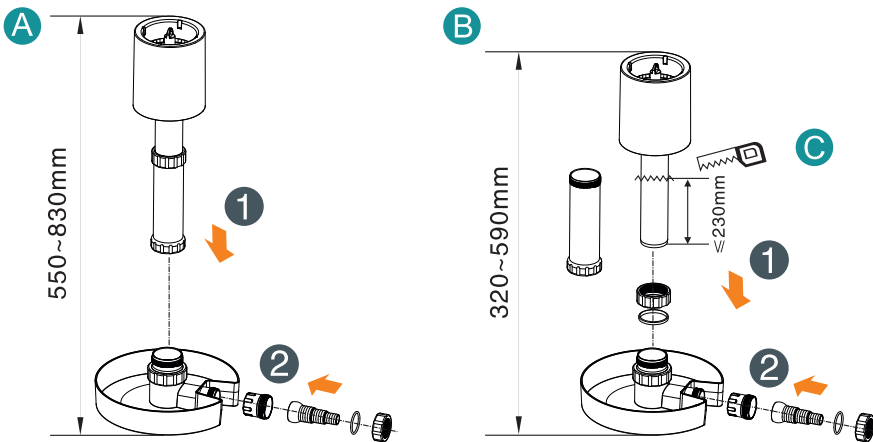

- Place the filter basket into the filter cartridge and attach the float.
- Connect the filter cartridge to the expansion pipe with the o-ring and coupling nut.
- Connect the expansion pipe to the skimmer base.
- Attach the hosetail to the skimmer base.
- Position the POND SKIM-1 in your pond. The directional tilt feature on the skimmer base enables you position the skimmer at an angle of up to 7.5 degrees whilst still remaining flush with the water surface.
- When positioning your skimmer in your pond, it is important to ensure that the skimmer base is weighted down with stones to keep the unit stabilised in your pond. Make sure that the hose connecting your skimmer to your pond pump lies flat on the base of your pond and it is not obstructed in any way.
- For best results, place your skimmer on the opposite end of your pond from any waterfall.

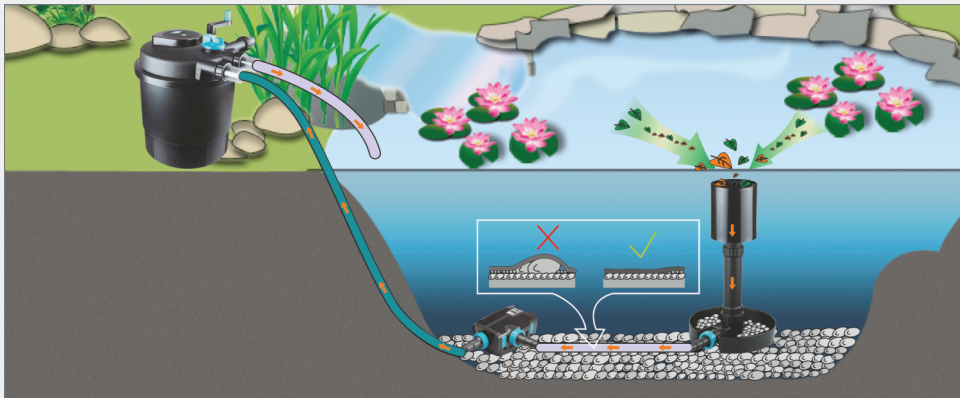

MAINTENANCE

To ensure the effective running of your pond skimmer, the filter basket will need to be cleaned periodically. After turning off your pump, lift off your float and then remove the filter basket to dispose of any debris. Replace the basket and float before turning your pump back on.

SPECIFICATIONS

MODEL	PONDSKIM-1
RECOMMENDED PUMP FLOW RATE	8000 – 16000 L/h
OUTLET	1"~1 ¼" ~ 1 ½"
SUITABLE FOR POND	40m ²
SUITABLE POND DEPTH	271 – 86cm
OUTLET HOSETAIL CONNECTOR	25/32/38mm

WARRANTY

Your PONDSKIM-1 unit comes complete with a 1 year warranty.

If your PONDSKIM-1 does develop a fault during the warranty period, please contact the supplier of the item for assistance.

Please note that the following perishable items are NOT covered under warranty:

- O-rings

